



203PB/403PB

PUSH BUTTON ADJUSTBLE VEST (203PB)/

PUSH BUTTON ADJUSTABLE VEST WITH LOOPS (403PB)

IMPORTANT INFO

- Meets FMVSS213 when used with a 100SM or 100TM.
- For use by passengers weight 31 – 168LBS.
- Vests sized XS – M come with crotch straps meeting NHTSA guidelines.
- Portable crotch straps or sewn in straps are available to order for larger vests.
- An EZ-ON mount is needed to use this vest.
- 203PB compatible mounts include: 100SM, 100FM, 100WC.
- 403PB compatible mounts include: 100SM, 100FM, 100WC, 100TM.
- Register this transportation vest to be notified of a safety recall.
- Sizing: (According to chest measurements)
XS 18” – 24” | S 25” – 32” | M 32” – 37” | L 37” – 43” | *Custom Sizing Available

WARRANTY

EZ-ON Products stands behind the products we make. Warranty covers any defects in material or workmanships under normal use during the warranty period. We will repair or replace product defects for 1 year from manufacturer date.



WARNING

Death or serious injury can occur If manufacturer’s instructions are not followed correctly. All EZ-ON products are dynamically tested to meet NHTSA standards. Please follow washing instructions on product tag. Replace product if it is damaged, frayed, or has been in a crash. Recommended replacement after six years. EZ-ON Products are not liable for injury if these recommendations are not followed.

PINCH TEST PROCEDURE

THE PINCH TEST

Tighten vest so that no pinch in the webbing can be achieved on the chest strap.
When vest is snug fingers will be unable to grab any webbing.


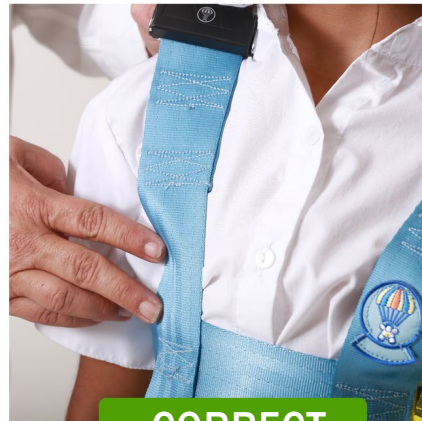
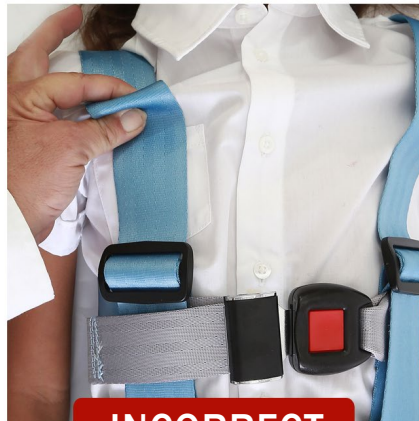




203PB/403PB

PUSH BUTTON ADJUSTABLE VEST (203PB) /

PUSH BUTTON ADJUSTABLE VEST WITH LOOPS (403PB)

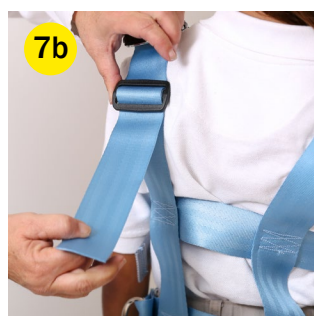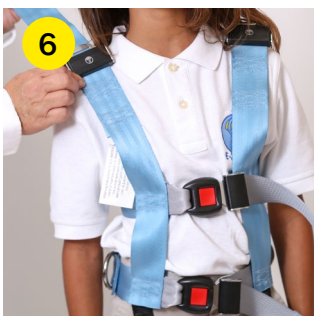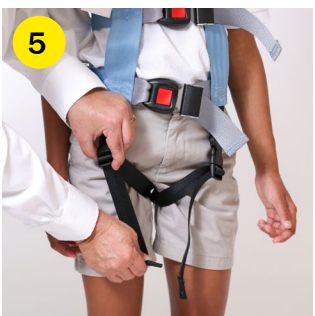

INSTALLATION INSTRUCTIONS

1. Hold vest while passenger steps into crotch straps with the E-Z-ON® parachute logo to front.

2. Keep waist strap low around hip level.

3. Close and secure push buttons.

4. Pull webbing ends snug.

**Be sure the vest fits securely.*

**Keep the waist low around the hip area.*

5. Adjust crotch straps to shorten or lengthen.

**To be snug but not tight.*

6. Adjust shoulder straps using adjusters.

**Pull webbing through adjuster to reduce slack.*

**Do not pull too tight as this will cause vest to pull up off of hips resulting in injury.*

KEY STEP

7. Back thread webbing through bar slides to prevent vest from loosening.

PINCH TEST

Please refer to procedure on reverse side.