



EZ-ON

**EZ-ON PRODUCTS**

**1-800-323-6598**

**FOR SCHOOL BUS USE ONLY**

**www.ezonpro.com**

# 543

## KID CAM

### IMPORTANT INFO

- Meets FMVSS213.
- Must be used on a school bus seat with access between the cushion and seat back to be installed.
- Seat must be equipped with a lap belt that is in compliance with FMVSS School bus seat belt requirements.
- For use by passengers weighing 31 - 168 lbs.
- Passengers seated behind occupants with 543 must be wearing a seatbelt, a transportation vest, or must be unoccupied.
- Please register this product to be notified for a safety recall.

### WARRANTY

*EZ-ON Products stands behind the products we make. Warranty covers any defects in material or workmanships under normal use during the warranty period. We will repair or replace product defects for 1 year from manufacturer date.*

### WARNING

Death or serious injury can occur if manufacturer's instructions are not followed correctly. All EZ-ON products are dynamically tested to meet NHTSA standards. Please follow washing instructions on product tag. Replace product if it is damaged, frayed, or has been in a crash. Recommended replacement after six years. EZ-ON Products are not liable for injury if these recommendations are not followed.


### EMERGENCY RELEASE PROCEDURE

When evacuating a passenger in a 543 belt, one cut of the lap belt will allow the passenger to evacuate the vehicle.

#### CUT ALONG DOTTED LINE FOR EMERGENCY RELEASE













**100 SCBC  
EZ-ON Safe Cut  
Belt Cutter**

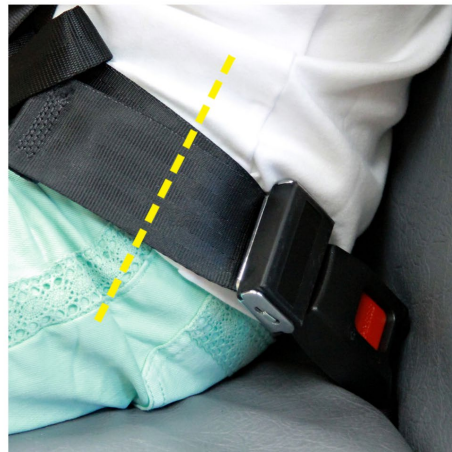



# 543

## KID CAM

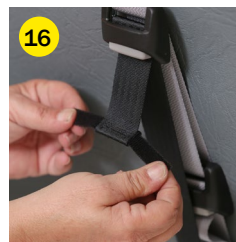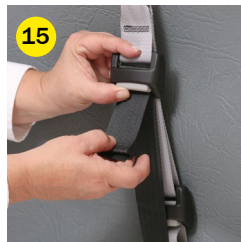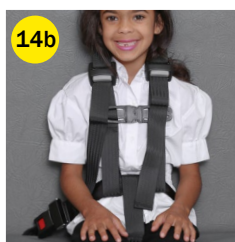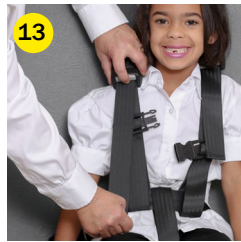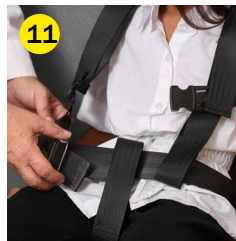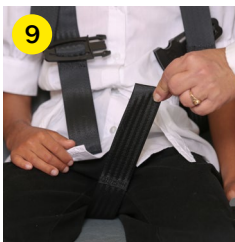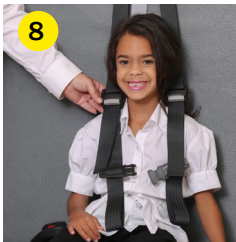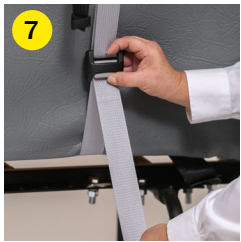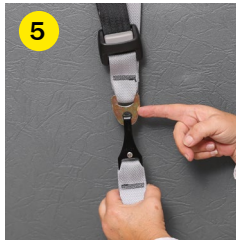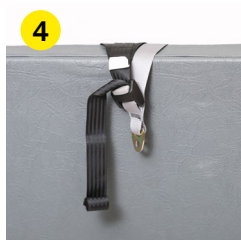

### INSTALLATION INSTRUCTIONS

1. Unlock the bus seat and lift up.
2. Wrap gray strap around bus seat back. Rest black shoulder straps on front of seat. Allow crotch straps to rest on seat.
3. Close and lock the bus seat.
4. Place Y-bridge on the seat top.
5. Lower flat bracket over back of bus seat and attach the snap hook onto the flat bracket.

6. Press the spring lock.
7. Pull gray webbing end snug.

### SECURING THE PASSENGER

8. Place belt straps over each shoulder.
9. Locate crotch strap in the center of passenger's legs.
10. Feed seat belt through the first shoulder strap loop, and then through the crotch strap loop.
11. Feed seat belt through second shoulder strap loop.
12. Buckle lap belt low and snug across lap, reducing any slack.

### ADJUSTING SHOULDER STRAPS

13. Press the spring-locks on each vest adjuster pulling loose end of the webbing to lengthen or shorten.

*\* Keep both adjusters same height on shoulders of passenger.*

14. Connect chest clip.
- \* Adjust to arm pit level.*

### ADJUSTING CROTCH STRAPS

15. Press spring-lock adjuster behind seat and pull black webbing end to shorten or lengthen.

*\* Adjust crotch strap snug but not too tight.*

16. Use velcro tab to control excess webbing.